mpman

Mp3 Player

Instruction Manual

FOR MODEL NO
MIRROR2

Please read this instruction carefully before the operation

EN

Features Overview

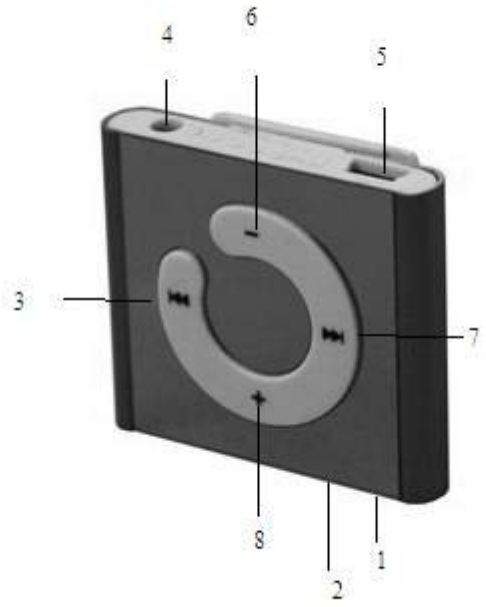

2. Key Functions of Buttons

1: On/Off
2: Reset/Indicator Light
3. Fast-forward/ Next music
4: Earphone jack
5: USB slot
6: Volume decreasing
7: Rewind /Previous music
8: Volume increasing

On/Off: Power on/off.

Indicator Light

Turn on this model, the indicator light will flash red light; when the model is playing music normally, the indicator light will flash blue light all the way; when being in the state of charging, the indicator light will flash alternately blue light and red light; finished charging, the indicator light will flash blue light.

3. Play Music

Basic Operations

1. Connect the earphone to player
2. Put the Power switch to be ON
   ⏭: Next (press) /Fast-forward: next music
   ⏮: Previous (press) / Rewind: previous music

3. To adjust the volume

+: To increase the volume by pressing this button.

-: To decrease the volume by pressing this button.

4. USB Disk

The player could be use as standard USB disk with operating system of Windows 2000.XP. and above, Mac OS 10.3 and above, Linux Redhat 8.0 and above (no driver needed) while Windows98 need to set up driver.

Battery

Make sure the power switch is being **on** to charge, or the player could not be charged properly. The light is on when the player is charging, the light will be off when the battery is full.

Disconnect the player and charger if you want to stop charging.

Turn off the player when you do not use player.

Trouble Shooting

No Power	❋ Check to see if battery is low. ❋ Check to see if the player is ON
No sound from earphone.	❋ Check to see Volume is set “0” and connect the earphone connects properly ❋ Make sure earphone is clean and in good status ❋ Damaged MP3 file may make noise and could not be played Make sure that the music files are not damaged.
Failure of music download	❋ Check to see if USB cable is damaged and connected properly. ❋ Check to see if driver is installed correctly ❋ Check to see if memory space is enough

Technical Specifications

Capacity	2GB
Interface	USB 2.0 High Speed
Max Playtime	Up to 4hrs
Battery Type & Capacity	Li-Polymer Rechargeable (3.7V)
File type	MP3, WMA
S/N ratio	85~95Db
Earphones output power	(L)5mW + (R)5m W(32Ohm)
Operating System	Compatible with Window2000/XP and above
Dimensions	37mm(L)* 43mm(W)* 13mm(H)
Weight	18g

For more information please check our website

www.mpmaneurope.com

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur